Quick Guide

Product Name:	Roof Repair Kit
PPE Required:	Gloves, protective glasses
Equipment Required:	Roller, Brush
Other Components:	Granule hardener, 225gsm Mat



Please use Tuff Stuff Flexible GRP Application Manual for full installation guidance.

1. **Preparation:** Ensure the area is dry and brushed free of all dirt and debris. Wipe clean with acetone if required.



2. **Masking:** Using the masking tape provided, neatly mask off the area to be repaired.



3. **Prepare CSM:** Pre-cut the CSM matting provided to fit neatly within the masked area.



4. **Granule Hardener:** Add the granule hardener to control the curing speed. Refer to the catalyst table on page 2 for the correct amount.



5. **Apply Resin:** Roll a generous, even layer of resin within the masked area.




Quick Guide


6 **Apply CSM:** Place the CSM matting onto the wet resin and begin working it in using the 4" roller.th the 4in roller.



7 **Consolidate CSM:** Allow the matting to soften for approximately 2 minutes, then consolidate with the roller until no straight fibres remain visible and a uniform “swirled” appearance is achieved.

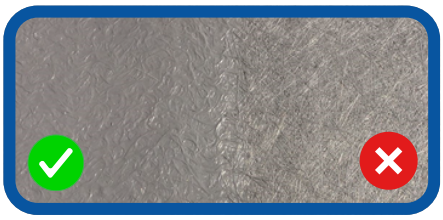

8 **Finish:** Remove the masking tape while the resin is still wet to leave a clean, neat edge. The repair is now complete.

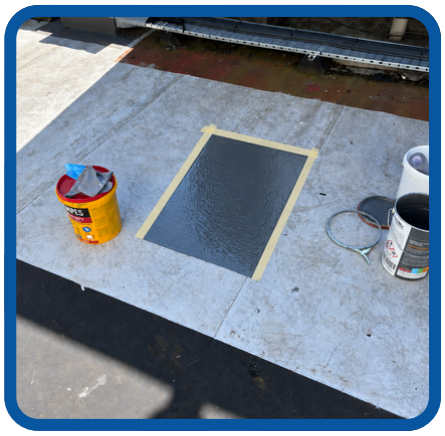

Please use Tuff Stuff Flexible GRP Application Manual for full installation guidance.

Temp Range (°C)	4–10	11–20	21–30
Catalyst Addition Rate	4%	3%	2%
Amount of Resin kg	Num. of Catalyst Scoops		
1.4	4	3	2
2.8	8	6	4
4.2	12	9	6
5.6	16	12	8
7.1	20	15	10
8.5	24	18	12
10	28	21	14